



ALL AREAS TO BE CLEANED BY DELIVERER

1. AGR personnel are solely responsible for closing the guard rails
2. Cleaning may only be performed with the guard rail closed

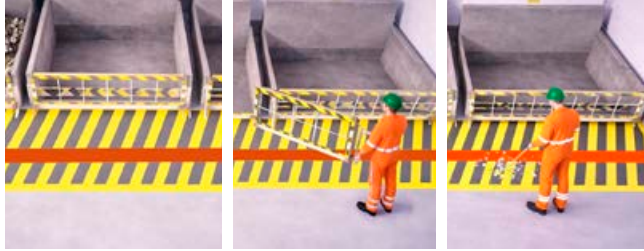

3. Clean with a broom and shovel

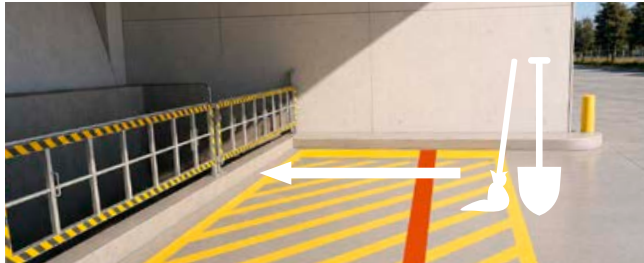

The safety zone behind the orange line may only be entered when the guard rail is closed!



REFUSE VEHICLE

- Approach the unloading edge directly
- Open vehicle using hydraulics
- Start unloading
- Close vehicle using hydraulics



MOVING FLOORS

- Drive up to the orange stop line
- Open the door release
- Approach the unloading edge
- Release the side auxiliary lock inside the safety zone
- Start unloading
- Close the vehicle outside the safety zone



PRESS CONTAINER

- Approach the unloading edge directly
- Release the side lock inside the safety zone
- Manually or using auxiliary devices
- Start unloading
- Close the vehicle outside the safety zone



CONTAINER WITH EMULSION PAINT

- Drive up to the orange stop line
- Release the bottom wing screws
- Approach the unloading edge
- Release the side wing screws inside the safety zone
- Start unloading
- Close the vehicle outside the safety zone

ENTRY TO THE SAFETY ZONE IS ONLY PERMITTED IF...

- guard rails for the intended refuse bunker and adjacent refuse bunkers are closed **or**
- unloading is taking place at the adjacent refuse bunkers

These unloading rules describe the process for unloading the most common types of vehicle. If you have any other questions, please consult AGR personnel.

Unloading rules

Rules for safety and conduct on the premises of the AGR Group



AI-GENERATED

GENERAL SAFETY RULES

REFUSE DELIVERIES FROM A TIPPING CONTAINER

(Different vehicle types have different requirements.)

1. The banksman assigns the tip-out point. The guard rail for the assigned refuse bunker is opened
2. Drive up to the orange stop line:
Open the doors outside the safety zone (there may be exceptions depending on the type of vehicle)

WRONG:
Inside
the safety zone



RIGHT:
Outside
the safety zone



3. Drive into the safety zone as far as the tipping edge and start unloading
4. If the safety zone must be entered, please ensure that the guard rails for the adjacent refuse bunkers are closed or unloading is in progress at these refuse bunkers



IMAGES AI-GENERATED

5. Start unloading
6. After completing the unloading process, drive out of the safety zone as far as the orange stop line and close the doors (see image on left)
7. The banksman closes the guard rail for the assigned refuse bunker

THE FOLLOWING PERSONAL PROTECTIVE EQUIPMENT MUST BE WORN DURING UNLOADING:



- Industrial safety helmet
- Safety glasses
- High-visibility clothing
- Closed footwear

BEHAVIOUR IN CASE OF DANGER EMERGENCY PLAN

Notify the alarm centre

- Stay calm!
- Make an emergency call:
Internal emergency no.: -250
External emergency no.: +492366 300-250
or (in case of fire) **activate the manual fire alarm**

Report the accident:

- **Who** is reporting the problem?
- **Where** did it happen?
- **What** happened?
- **When** did it happen?
- **How many** people are injured?
- **Wait** for further questions!

If necessary, provide first aid:

- Cordon off the accident site
- Administer treatment to injured persons
- Follow instructions from operating personnel
- Protecting yourself is always the priority

In the event of an evacuation announcement on the loudspeaker system

- Go to assembly point 2 at the delivery level
- If necessary, keep an emergency route clear for emergency vehicles

You must stay at the assembly points until the site manager has given final clearance!

THE FOLLOWING INSTRUCTIONS MUST BE FOLLOWED:



- Do not operate the unloading equipment yourself!
- Speed limit on the premises: 15 km/h.